

# ATTACHING SNOW CHAINS TO YOUR VEHICLE

jucy

1



Hold chains up and remove any twists so they hang freely. Ensure the **black band** is on the bottom hoop with the open end facing the wheel.

2



Place chains on the ground facing the wheel. Slide chains around behind the wheel.

3



Locate the hook and chain at the end of the chain loops. These are marked with multi-coloured washers.

4



Lift the hook and chain around the wheel and connect together at the **top rear** of the tyre.

5




Start rolling both plastic hoops **anticlockwise** around the wheel. Rotate both plastic hoops together at the same time.

6




Keep rotating both plastic hoops around the wheel until the **black band** sits at the **top front** of the tyre.

7

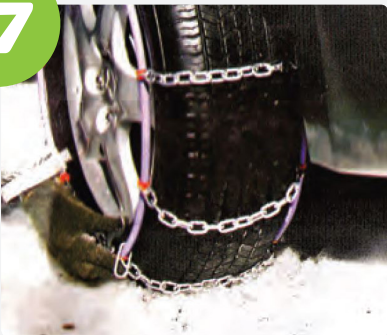

Shuffle the chains around the tyre so they sit squarely on the tyre and then tighten the chains around the wheel. Adjust the inside hook first **then the front lever**.

8

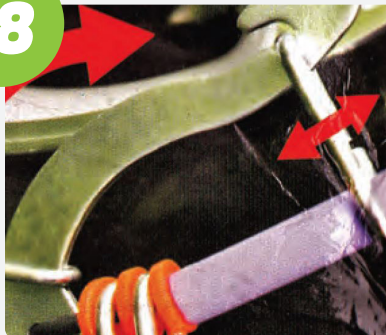

Tighten the ratchet and cam lever, once the chains are tight secure the lever under the **side loop** along with any excess chain. Move vehicle forward 10m and re-tighten the chains until **very tight**.

## IMPORTANT INFORMATION

**DO NOT EXCEED 20KPH**

**CHAINS MUST BE FITTED TIGHTLY**

**ACCELERATE AND DECELERATE SLOWLY**

**ONLY FIT CHAINS WHEN THERE IS SNOW COVERING THE ROAD OR WHEN INSTRUCTED**

**FIT CHAINS TO THE DRIVING WHEELS**

✉ [res@jucyworld.com](mailto:res@jucyworld.com)

📞 NEW ZEALAND 0800 399 736 / AUSTRALIA 1800 150 850

**JUCY.CO.NZ**